


SafetyRail™ ADA-Compliant Barricade QuikStart Assembly Instructions



Attach the **lower** guide rail first. Then **attach** the **upper** guide rail.

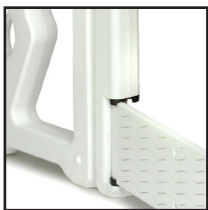

Align the guide rail with the upright.



Insert the guide rail into the **center** of the bushings.



Engage the notches of the guide rail with the bushing.



Rotate the guide rail into a position that is perpendicular to the upright.

Do not force it to rotate. Disengage & repeat the steps.



Plastic Safety Systems, Inc.

2444 Baldwin Road • Cleveland, OH 44104

216.231.8590 • 800.662.6338

www.plasticsafety.com