




NiteLite Fencing

Installation Instructions

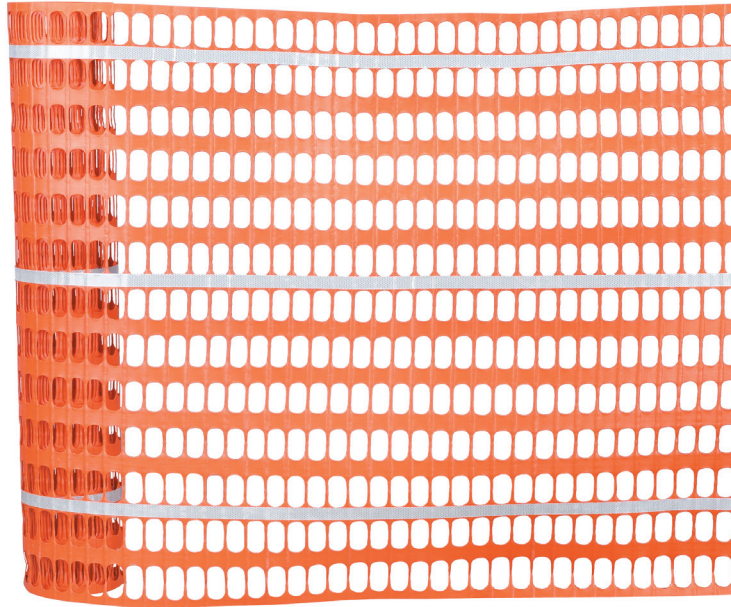

Normal Usage

- ◆ Fence posts should be driven into the ground to a depth of 18 to 24 inches using a post drive, Flexible rod posts with UV inhibitors are recommended for many installations. Metal or wood posts are recommended for more demanding uses. Posts should be set into cement for permanent installations.
- ◆ Fence posts should be spaced every six to eight feet. Prior to securing to post, pull fence tight to take up any slack.
- ◆ Secure fencing to post with nylon or other non-metallic cable ties. Wrap cable tie around vertical strand of fence and fence post. Use at least three cable ties per fence post. Space ties evenly at top, bottom, & middle of post.
- ◆ Two sections of fence may be connected by overlapping the ends and joining with cable ties or weaving a rod through both fences.

Longer Term Usage

- ◆ Tension rope should be used to stabilize fence & prevent sagging between fence posts. Anchor tension rope at bottom of end post & run along top edge of fence. Pull rope tight & tie to bottom of other end post. Attach top edge of fence to tension rope using cable ties.
- ◆ For best results in wind, fence should be completely immobilized. If using metal T-posts, foam pipe insulation should be put over post. Sandwich fence between wood strips & foam.

“On the Roadway for Safety”®