


Quik-Mark™

Parts List & Installation Guide

PSS

Plastic Safety
Systems, Inc.

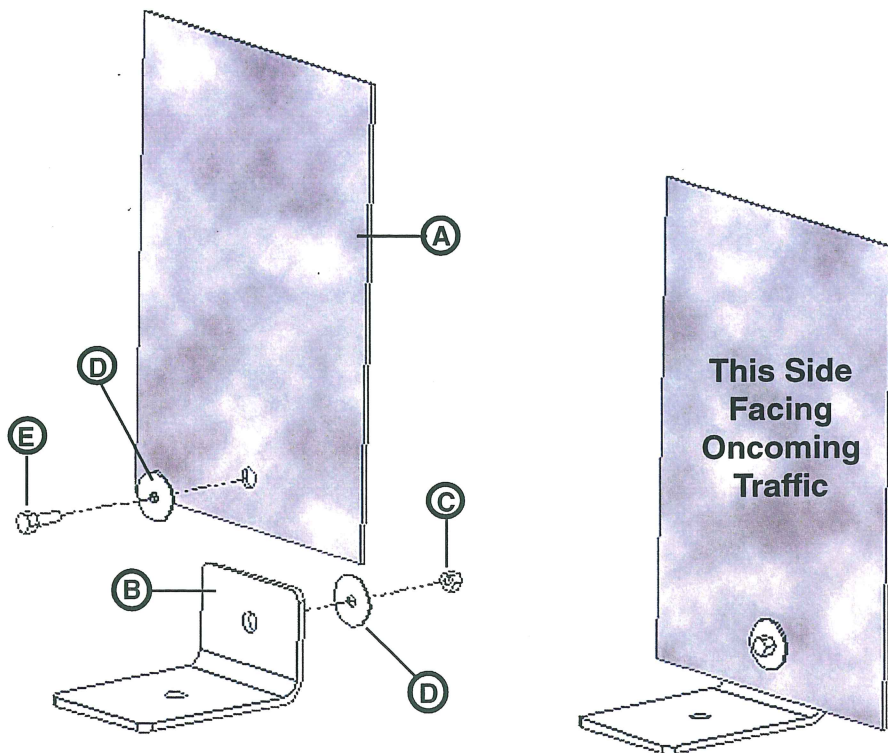

Quik-Mark™ Parts List:

- Ⓐ Quik-Mark Panel
- Ⓑ "L"- Bracket
- Ⓒ 1/4"-20 x 7/8" Nylon Lock Nut
- Ⓓ 1/4" Fender Washer
- Ⓔ 1/4"-20 x 7/8" Hex Head Bolt

RECOMMENDED INSTALLATION GUIDE:

NOTE : The Quik-Mark 2-piece system can be installed with two mechanical fasteners or a combination of one mechanical fastener and adhesives.

STEP ONE : Clean and prepare the barrier surface for proper adhesion of all adhesive materials or mechanical fasteners.

STEP TWO : Align the device bracket(B) section on the barrier wall per state specs.

STEP THREE : Fasten the bracket section(B) to the barrier wall surface using either two mechanical fasteners "or" a combination of one mechanical fastener and a weather proof adhesive or a Butyl adhesive pad or an equivalent. (NOTE- use the single predrilled mounting hole supplied on each bracket to attach the single fastener when using the combination fastener and adhesive mounting system).

STEP FOUR : Install the panel(A) to the bracket(B) using PSS supplied locknut hardware(C,D&E) or equal too.

Plastic Safety Systems, Inc.
2444 Baldwin Road
Cleveland, Ohio 44104

800-662-6338

"On the Roadway for Safety"®

Copyright © 2001 REV. 9/01

plasticsafety.com