




RoadQuake Modular™

Temporary Portable Rumble Strip Assembly Instructions

RoadQuake Modular is designed for posted speed limits of 60 mph or less, and temperatures above 40° F.

A modular section measures 12" wide, 13/16" thick, and 44" long, including the slots on the left and the tabs on the right. 3 modular sections make 1 complete rumble strip. A section weighs 33 lbs.

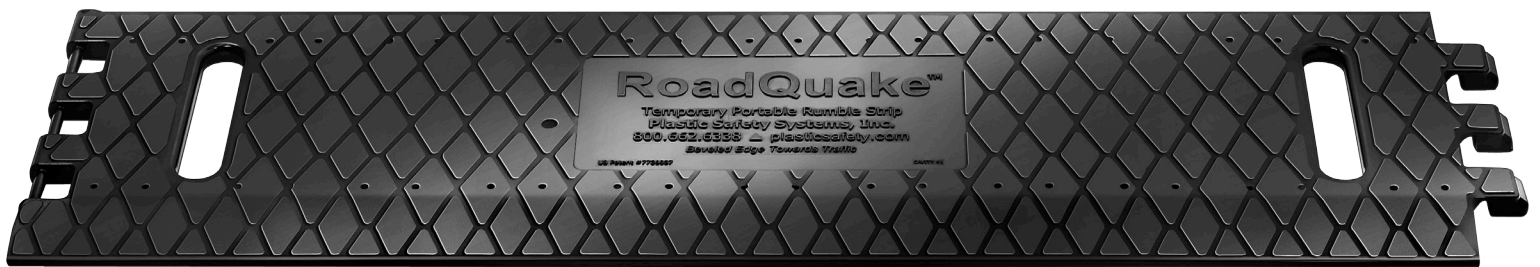

To assemble modular sections:

RoadQuake Modular is ready-to-assemble. No hardware is required.

In the picture on the left, the section on the left is the "tabbed" section, the section on the right is the "slotted" section.

To begin: make sure that the beveled edge of both Modular sections is facing in the same direction, as shown in the picture on the left.

Line up 2 sections:

The goal is simple: to properly insert tabs into slots.

The channel under the tab, shown in Image 1, must engage the rod on the slotted end, shown in Image 2.

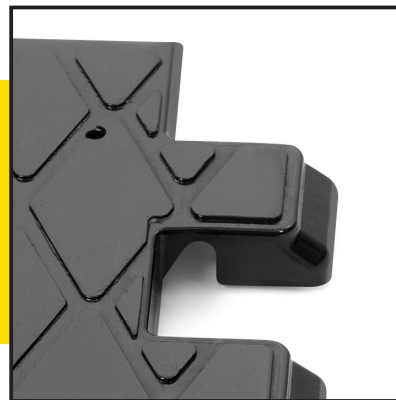


Image 1: Tabs



Image 2: Slots

Watch our video, "Assembling RoadQuake Modular", on YouTube:
<http://www.youtube.com/user/plasticsafetysystems>

RoadQuake Modular™

Temporary Portable Rumble Strip Instruction Procedure (cont.)



Engage Tabs in Slots:

Elevate the "slotted" section a minimum of 1". Use a piece of wood, as seen in the picture on the left or a shovel handle. Whatever might be handy, and effective.

Hold "tabbed" section vertically.


Engage the tabs into the slots.

Pull the "tabbed" section laterally, away from the "slotted" section. This action will engage the channels onto the rod of the "slotted" section.

Lower the "Tabbed" Section:

Lower the "tabbed" section until it is on the ground. Remove the block of wood.

Repeat the process to add more sections.

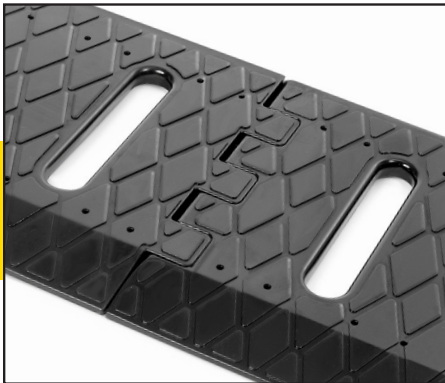

The connection should be flat:

A properly assembled connection should be smooth and flat, and look like the assembled sections in the picture on the left.

It should not look like this:

The picture on the right shows tabs which are improperly engaged.

To disengage and reassemble:

Pick up the end of the "tabbed" section. Lift the end up, in as far a vertical position as needed, to disengage the tabs. Then repeat the assembly steps.



"On the Roadway for Safety"®

2444 Baldwin Road • Cleveland, OH • 44104 • 800-662-6338 • www.plasticsafety.com